


DEFLECTOR AND SIDEWINGS DRAWING CAN BE USED ON VOLKSWAGEN CRAFTER CAD DRAWINGS.

MERCEDES SPRINTER	VOLKSWAGEN CRAFTER
WR-527 / WR-524 (CMP+100)	WR-777 / WR-774 (CMP+100)

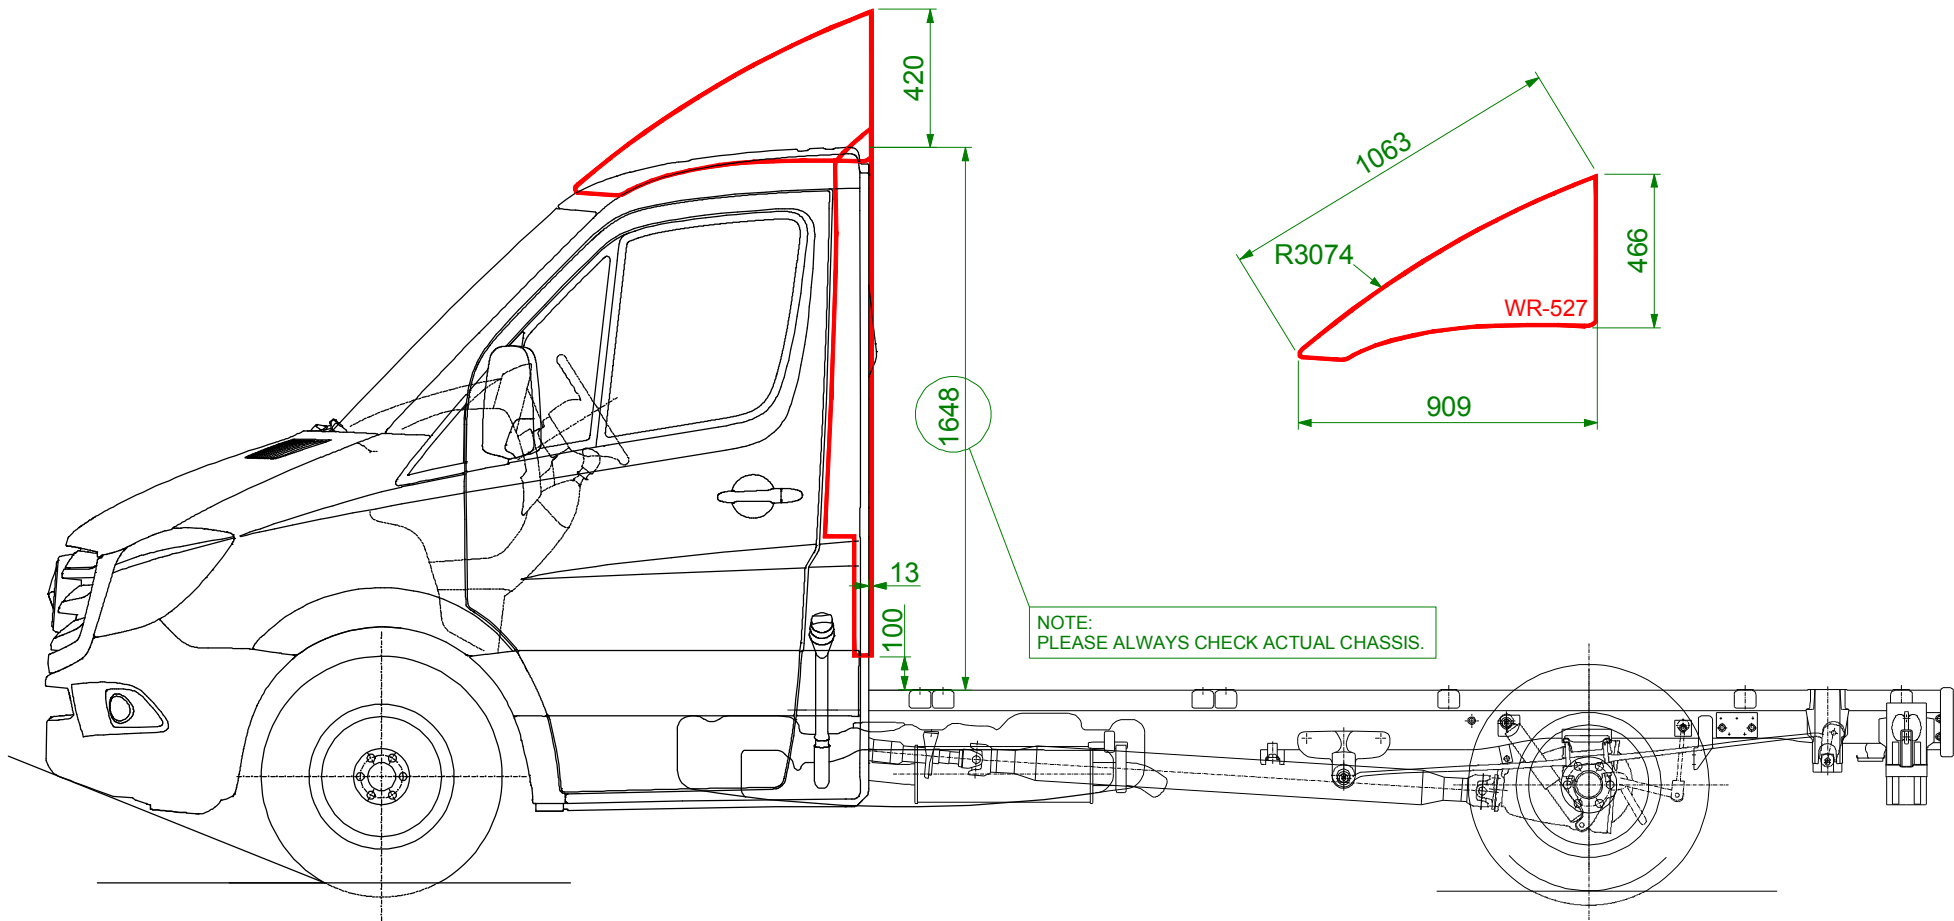

NOTE:
PLEASE ALWAYS CHECK ACTUAL CHASSIS.

DRAWN BY	PS
DATE	21-12-16
BATCH	-
CUSTOMER	-

PART No. WR-527 / WR-524 (CMP+100)
 MERCEDES SPRINTER LOW 3D FAIRING AND FULL LENGTH CAB REAR SIDEWINGS.
 OVERALL WIDTH IS 2095mm. SIDEWINGS PROTRUDE 13mm BEHIND CAB-REAR VERTICAL SEAMS, MEASURED AT CHASSIS TOP LEVEL.
 CHASSIS TO TOP OF CAB IS APPROX 1648mm. THIS DIMENSION IS SUBJECT TO CHANGE AND CANNOT BE GUARANTEED BY AERODYNE.

Issue No: 01 ALL DIMENSIONS ARE IN MILLIMETRES

AERODYNE GLOBAL LTD
 Innovation House
 Tunnel Bank, Bourne
 Lincolnshire
 PE10 0DJ, UK
 +44 (0) 1778 422000

